



## Monitoring UPS

eG Innovations Product Documentation

# Table of Contents

---

CHAPTER 1: INTRODUCTION .....	1
CHAPTER 2: HOW TO MONITOR UPS USING EG ENTERPRISE ? .....	2
2.1 Managing the UPS .....	2
CHAPTER 3: MONITORING A GENERIC UPS .....	5
3.1 The Hardware Layer .....	6
3.1.1 UPS Digital Input Test .....	6
3.1.2 UPS Digital Output Test .....	10
3.1.3 UPS Temperature Test .....	13
3.1.4 UPS Humidity Test .....	16
3.2 The UPS Battery Layer .....	18
3.2.1 UPS Battery Details Test .....	18
3.2.2 UPS Battery Status Test .....	22
3.3 The UPS Service Layer .....	25
3.3.1 UPS Lines Test .....	25
3.3.2 UPS Inputs Test .....	28
3.3.3 UPS Outputs Test .....	30
ABOUT EG INNOVATIONS .....	33

## Table of Figures

---

Figure 2.1: Adding a UPS .....	2
Figure 2.2: List of Unconfigured tests for the UPS .....	3
Figure 2.3: Configuring the UPS Lines test .....	4
Figure 3.1: The layer model of a Generic UPS .....	5
Figure 3.2: The tests mapped to the Hardware layer .....	6
Figure 3.3: The tests mapped to the UPS Battery layer .....	18
Figure 3.4: The tests mapped to the UPS Service layer .....	25

## Chapter 1: Introduction

An uninterrupted power supply (UPS), also known as a battery back-up, provides emergency power and, depending on the topology, line regulation as well to connected equipment by supplying power from a separate source when utility power is not available. It differs from an auxiliary or emergency power system or standby generator, which does not provide instant protection from a momentary power interruption. A UPS, however, can be used to provide uninterrupted power to equipment, typically for 5–15 minutes until an auxiliary power supply can be turned on or utility power is restored.

Since a UPS is typically used to protect computers, data centers, telecommunication equipment or other electrical equipment, issues in its performance – eg., the depletion of the battery charge - can cause injuries, fatalities, serious business disruption or data loss. It is therefore imperative that the UPS is monitored periodically, and its 24 x 7 availability ensured. This is where eG Enterprise helps administrators.

## Chapter 2: How to Monitor UPS Using eG Enterprise ?

eG Enterprise monitors the UPS in an agentless manner. All that is required for this is a single eG agent on any remote Windows host in the environment. This agent periodically polls the SNMP MIB of the UPS and gathers metrics related to its performance. To enable the eG agent to collect metrics, you should enable SNMP on the UPS.

### 2.1 Managing the UPS

The eG Enterprise cannot automatically discover the UPS so that you need to manually add the component for monitoring. Remember that the eG Enterprise automatically manages the components that are added manually. To manage a UPS component, do the following:

1. Log into the eG administrative interface.
2. Follow the Components -> Add/Modify menu sequence in the **Infrastructure** tile of the **Admin** menu.
3. In the **COMPONENT** page that appears next, select UPS as the **Component type**. Then, click the **Add New Component** button. This will invoke Figure 2.1.

COMPONENT

This page enables the administrator to provide the details of a new component

Category	Component type
All	UPS

Component information

Host IP/Name	192.168.10.1
Nick name	ups

Monitoring approach

External agents	<ul style="list-style-type: none"> <li>192.168.11.41</li> <li>192.168.11.49</li> <li>192.168.8.124</li> <li>192.168.8.170</li> </ul>
-----------------	--

Add

Figure 2.1: Adding a UPS

4. Specify the **Host IP/Name** and the **Nick name** of the UPS in Chapter 2. Then, click the **Add** button to register the changes.
5. When you attempt to sign out, a list of unconfigured tests appears.

List of unconfigured tests for 'UPS'		
Performance		ups
UPS Battery Details	UPS Battery Status	UPS Inputs
UPS Lines	UPS Outputs	Device Uptime
Network Interfaces		

Figure 2.2: List of Unconfigured tests for the UPS

4. Click on any test in the list of unconfigured tests. For instance, click on the **UPS Lines** test to configure it. In the page that appears, specify the parameters as shown in Figure 2.3.

TEST PERIOD	5 mins
HOST	192.168.10.1
SNMPPORT	161
TIMEOUT	10
DATA OVER TCP	<input type="radio"/> Yes <input checked="" type="radio"/> No
SNMPVERSION	v3
CONTEXT	none
USERNAME	admin
AUTHPASS	*****
CONFIRM PASSWORD	*****
AUTHTYPE	MD5
ENCRYPTFLAG	<input checked="" type="radio"/> Yes <input type="radio"/> No
ENCRYPTTYPE	DES
ENCRYPTPASSWORD	*****
CONFIRM PASSWORD	*****

Figure 2.3: Configuring the UPS Lines test

5. To know how to configure parameters, refer to [Monitoring a Generic UPS](#) chapter.
6. Next, signout of the eG administrative interface.

## Chapter 3: Monitoring a Generic UPS

eG Enterprise provides a specialized UPS monitoring model (see Chapter 3) to monitor the external availability and internal health of a generic UPS and its core components.



Figure 3.1: The layer model of a Generic UPS

Every layer of Figure 3.1 is mapped to a variety of tests which connect to the SNMP MIB of the UPS to collect critical statistics pertaining to its performance. The metrics reported by these tests enable administrators to answer the following questions:

- Is the UPS currently running on battery or on power?
- If running on battery, what is the time for which the battery has been used? Is very little running time left with the battery?
- How much charge is still remaining with the battery? Has the battery status already turned to Deplete?
- Has the battery temperature suddenly spiked?
- Were any bad input lines detected to the UPS?
- Were any severe power/voltage fluctuations discovered in the input lines?
- Is any output line consuming the power capacity of the UPS excessively?

The **Network** layer has been dealt with extensively in the *Monitoring Cisco Router* document. The sections to come will discuss the remaining layers of the layer model in detail.

## 3.1 The Hardware Layer

Using the tests mapped to this layer, administrators can determine the status of the digital input sequence and the digital output sequence. In addition, administrators can closely monitor the temperature and relative humidity of each sensor in the UPS. **Note that this layer will be visible in the layer model only when one/more test(s) associated with this layer are enabled.**

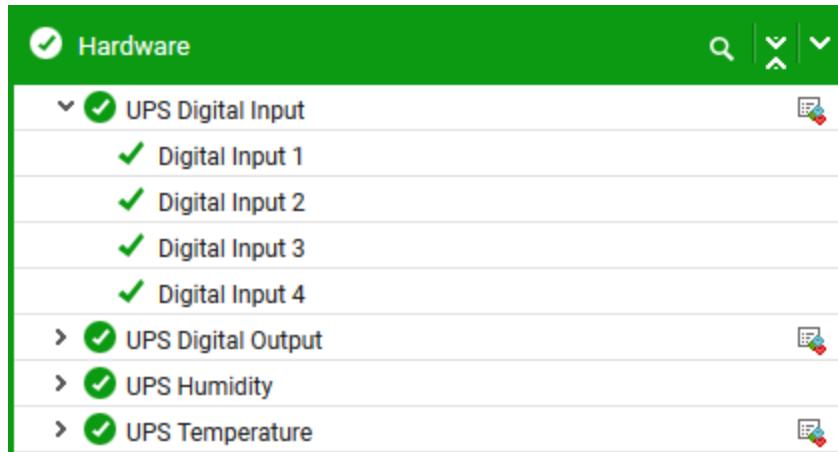


Figure 3.2: The tests mapped to the Hardware layer

Let us discuss each test of this layer (see Figure 3.2) in the forthcoming sections.

### 3.1.1 UPS Digital Input Test

For each digital input sequence on the target UPS, this test reports the current status of the digital input sequence. Using this test, administrators can also determine whether/not the digital input sequence was used as a normally closed contact. This way, administrators can determine the digital input sequences that were in *Off* state for a prolonged period of time.

This test is disabled by default. To enable the test, go to the **ENABLE / DISABLE TESTS** page using the menu sequence : Agents -> Tests -> Enable/Disable, pick the desired **Component type**, set *Performance* as the **Test type**, choose the test from the **DISABLED TESTS** list, and click on the < button to move the test to the **ENABLED TESTS** list. Finally, click the **Update** button.

**Target of the test :** An UPS

**Agent deploying the test :** An external agent

**Outputs of the test :** One set of results for each digital input sequence of the target UPS being monitored.

## Configurable parameters for the test

Parameter	Description
Test Period	How often should the test be executed.
Host	The IP address of the host for which this test is to be configured.
SNMPPort	The port at which the monitored target exposes its SNMP MIB; The default value is 161.
SNMPVersion	By default, the eG agent supports SNMP version 1. Accordingly, the default selection in the SNMPversion list is <b>v1</b> . However, if a different SNMP framework is in use in your environment, say SNMP <b>v2</b> or <b>v3</b> , then select the corresponding option from this list.
SNMPCommunity	The SNMP community name that the test uses to communicate with the firewall. This parameter is specific to SNMP <b>v1</b> and <b>v2</b> only. Therefore, if the SNMPVersion chosen is <b>v3</b> , then this parameter will not appear.
UserName	This parameter appears only when <b>v3</b> is selected as the SNMPVersion. SNMP version 3 (SNMPv3) is an extensible SNMP Framework which supplements the SNMPv2 Framework, by additionally supporting message security, access control, and remote SNMP configuration capabilities. To extract performance statistics from the MIB using the highly secure SNMP v3 protocol, the eG agent has to be configured with the required access privileges – in other words, the eG agent should connect to the MIB using the credentials of a user with access permissions to be MIB. Therefore, specify the name of such a user against this parameter.
Context	This parameter appears only when v3 is selected as the SNMPVersion. An SNMP context is a collection of management information accessible by an SNMP entity. An item of management information may exist in more than one context and an SNMP entity potentially has access to many contexts. A context is identified by the SNMPEngineID value of the entity hosting the management information (also called a contextEngineID) and a context name that identifies the specific context (also called a contextName). If the Username provided is associated with a context name, then the eG agent will be able to poll the MIB and collect metrics only if it is configured with the context name as well. In such cases therefore, specify the context name of the Username in the Context text box. By default, this parameter is set to <i>none</i> .
AuthPass	Specify the password that corresponds to the above-mentioned UserName. This parameter once again appears only if the SNMPversion selected is <b>v3</b> .
Confirm Password	Confirm the AuthPass by retying it here.
AuthType	This parameter too appears only if <b>v3</b> is selected as the SNMPVersion. From the AuthType list box, choose the authentication algorithm using which SNMP v3 converts the specified username and password into a 32-bit format to ensure security of SNMP

Parameter	Description
	transactions. You can choose between the following options: <ul style="list-style-type: none"> <li>• <b>MD5</b> – Message Digest Algorithm</li> <li>• <b>SHA</b> – Secure Hash Algorithm</li> </ul>
EncryptFlag	This flag appears only when <b>v3</b> is selected as the SNMPVersion. By default, the eG agent does not encrypt SNMP requests. Accordingly, the this flag is set to <b>No</b> by default. To ensure that SNMP requests sent by the eG agent are encrypted, select the <b>Yes</b> option.
EncryptType	If this EncryptFlag is set to <b>Yes</b> , then you will have to mention the encryption type by selecting an option from the EncryptType list. SNMP v3 supports the following encryption types: <ul style="list-style-type: none"> <li>• <b>DES</b> – Data Encryption Standard</li> <li>• <b>AES</b> – Advanced Encryption Standard</li> </ul>
EncryptPassword	Specify the encryption password here.
Confirm Password	Confirm the encryption password by retyping it here.
Timeout	Specify the duration (in seconds) within which the SNMP query executed by this test should time out in this text box. The default is 10 seconds.
Data Over TCP	By default, in an IT environment, all data transmission occurs over UDP. Some environments however, may be specifically configured to offload a fraction of the data traffic – for instance, certain types of data traffic or traffic pertaining to specific components – to other protocols like TCP, so as to prevent UDP overloads. In such environments, you can instruct the eG agent to conduct the SNMP data traffic related to the monitored target over TCP (and not UDP). For this, set this flag to <b>Yes</b> . By default, this flag is set to <b>No</b> .

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Status	Indicates the current status of this digital input sequence.		The values reported by this measure and its numeric equivalents are mentioned in the table below:

Measurement	Description	Measurement Unit	Interpretation						
			<table border="1"> <thead> <tr> <th>Measure value</th><th>Numeric Value</th></tr> </thead> <tbody> <tr> <td>Off</td><td>0</td></tr> <tr> <td>On</td><td>1</td></tr> </tbody> </table> <p><b>Note:</b></p> <p>By default, this measure reports the <b>Measure Values</b> listed in the table above to indicate the current state of each digital input sequence. The graph of this measure however, is represented using the numeric equivalents only i.e., 0 or 1.</p>	Measure value	Numeric Value	Off	0	On	1
Measure value	Numeric Value								
Off	0								
On	1								
Is used as NC contact?	Indicates whether/not this digital input sequence was used as a normally closed contact.		<p>A normally closed (NC) contact pair is closed (in a conductive state) when it, or the device operating it, is in a deenergized state or relaxed state.</p> <p>The values reported by this measure and its numeric equivalents are mentioned in the table below:</p> <table border="1"> <thead> <tr> <th>Measure value</th><th>Numeric Value</th></tr> </thead> <tbody> <tr> <td>No</td><td>0</td></tr> <tr> <td>Yes</td><td>1</td></tr> </tbody> </table> <p><b>Note:</b></p> <p>By default, this measure reports the <b>Measure Values</b> listed in the table above to indicate whether/not this digital input sequence was used as a normally closed contact. The graph of this measure however, is represented using the numeric equivalents only i.e., 0 or 1.</p>	Measure value	Numeric Value	No	0	Yes	1
Measure value	Numeric Value								
No	0								
Yes	1								

### 3.1.2 UPS Digital Output Test

For each digital output sequence on the target UPS, this test reports the current status of the digital output sequence. Using this test, administrators can also determine whether/not the digital output sequence was used as a normally closed contact. This way, administrators can determine the digital output sequences that were in *Off* state for a prolonged period of time.

This test is disabled by default. To enable the test, go to the **ENABLE / DISABLE TESTS** page using the menu sequence : Agents -> Tests -> Enable/Disable, pick the desired **Component type**, set *Performance* as the **Test type**, choose the test from the **DISABLED TESTS** list, and click on the < button to move the test to the **ENABLED TESTS** list. Finally, click the **Update** button.

**Target of the test :** An UPS

**Agent deploying the test :** An external agent

**Outputs of the test :** One set of results for each digital output sequence of the target UPS being monitored.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The IP address of the host for which this test is to be configured.
SNMPPort	The port at which the monitored target exposes its SNMP MIB; The default value is 161.
SNMPVersion	By default, the eG agent supports SNMP version 1. Accordingly, the default selection in the SNMPversion list is <b>v1</b> . However, if a different SNMP framework is in use in your environment, say SNMP <b>v2</b> or <b>v3</b> , then select the corresponding option from this list.
SNMPCommunity	The SNMP community name that the test uses to communicate with the firewall. This parameter is specific to SNMP <b>v1</b> and <b>v2</b> only. Therefore, if the SNMPVersion chosen is <b>v3</b> , then this parameter will not appear.
UserName	This parameter appears only when <b>v3</b> is selected as the SNMPVersion. SNMP version 3 (SNMPv3) is an extensible SNMP Framework which supplements the SNMPv2 Framework, by additionally supporting message security, access control, and remote SNMP configuration capabilities. To extract performance statistics from the MIB using the highly secure SNMP v3 protocol, the eG agent has to be configured with the required access privileges – in other words, the eG agent should connect to the MIB

Parameter	Description
	using the credentials of a user with access permissions to be MIB. Therefore, specify the name of such a user against this parameter.
Context	This parameter appears only when v3 is selected as the SNMPVersion. An SNMP context is a collection of management information accessible by an SNMP entity. An item of management information may exist in more than one context and an SNMP entity potentially has access to many contexts. A context is identified by the SNMPEngineID value of the entity hosting the management information (also called a contextEngineID) and a context name that identifies the specific context (also called a contextName). If the Username provided is associated with a context name, then the eG agent will be able to poll the MIB and collect metrics only if it is configured with the context name as well. In such cases therefore, specify the context name of the Username in the Context text box. By default, this parameter is set to <i>none</i> .
AuthPass	Specify the password that corresponds to the above-mentioned UserName. This parameter once again appears only if the SNMPversion selected is <b>v3</b> .
Confirm Password	Confirm the AuthPass by retying it here.
AuthType	This parameter too appears only if <b>v3</b> is selected as the SNMPVersion. From the AuthType list box, choose the authentication algorithm using which SNMP v3 converts the specified username and password into a 32-bit format to ensure security of SNMP transactions. You can choose between the following options: <ul style="list-style-type: none"> <li>• <b>MD5</b> – Message Digest Algorithm</li> <li>• <b>SHA</b> – Secure Hash Algorithm</li> </ul>
EncryptFlag	This flag appears only when <b>v3</b> is selected as the SNMPVersion. By default, the eG agent does not encrypt SNMP requests. Accordingly, the this flag is set to <b>No</b> by default. To ensure that SNMP requests sent by the eG agent are encrypted, select the <b>Yes</b> option.
EncryptType	If this EncryptFlag is set to <b>Yes</b> , then you will have to mention the encryption type by selecting an option from the EncryptType list. SNMP v3 supports the following encryption types: <ul style="list-style-type: none"> <li>• <b>DES</b> – Data Encryption Standard</li> <li>• <b>AES</b> – Advanced Encryption Standard</li> </ul>
EncryptPassword	Specify the encryption password here.
Confirm Password	Confirm the encryption password by retying it here.

Parameter	Description
Timeout	Specify the duration (in seconds) within which the SNMP query executed by this test should time out in this text box. The default is 10 seconds.
Data Over TCP	By default, in an IT environment, all data transmission occurs over UDP. Some environments however, may be specifically configured to offload a fraction of the data traffic – for instance, certain types of data traffic or traffic pertaining to specific components – to other protocols like TCP, so as to prevent UDP overloads. In such environments, you can instruct the eG agent to conduct the SNMP data traffic related to the monitored target over TCP (and not UDP). For this, set this flag to <b>Yes</b> . By default, this flag is set to <b>No</b> .

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation						
Status	Indicates the current status of this digital output sequence.		<p>The values reported by this measure and its numeric equivalents are mentioned in the table below:</p> <table border="1"> <thead> <tr> <th>Measure value</th> <th>Numeric Value</th> </tr> </thead> <tbody> <tr> <td>Off</td> <td>0</td> </tr> <tr> <td>On</td> <td>1</td> </tr> </tbody> </table> <p><b>Note:</b></p> <p>By default, this measure reports the <b>Measure Values</b> listed in the table above to indicate the current state of each digital output sequence. The graph of this measure however, is represented using the numeric equivalents only i.e., 0 or 1.</p>	Measure value	Numeric Value	Off	0	On	1
Measure value	Numeric Value								
Off	0								
On	1								
Is used as NC contact?	Indicates whether/not this digital output sequence was used as a normally closed contact.		<p>A normally closed (NC) contact pair is closed (in a conductive state) when it, or the device operating it, is in a de-energized state or relaxed state.</p> <p>The values reported by this measure and its numeric equivalents are</p>						

Measurement	Description	Measurement Unit	Interpretation						
			<p>mentioned in the table below:</p> <table border="1"> <thead> <tr> <th>Measure value</th><th>Numeric Value</th></tr> </thead> <tbody> <tr> <td>No</td><td>0</td></tr> <tr> <td>Yes</td><td>1</td></tr> </tbody> </table> <p><b>Note:</b></p> <p>By default, this measure reports the <b>Measure Values</b> listed in the table above to indicate whether/not this digital output sequence was used as a normally closed contact. The graph of this measure however, is represented using the numeric equivalents only i.e., 0 or 1.</p>	Measure value	Numeric Value	No	0	Yes	1
Measure value	Numeric Value								
No	0								
Yes	1								

### 3.1.3 UPS Temperature Test

Abnormal temperature of the sensors in the UPS may often lead to the malfunctioning of the UPS which when left unnoticed may affect the overall health. Therefore, it is essential to monitor the temperature of the sensors round the clock! This test auto-discovers the sensors on the target UPS and reports the current temperature of each sensor. Using this test, administrators can figure out the hardware component that is not within the admissible temperature range and is malfunctioning.

This test is disabled by default. To enable the test, go to the **ENABLE / DISABLE TESTS** page using the menu sequence : Agents -> Tests -> Enable/Disable, pick the desired **Component type**, set *Performance* as the **Test type**, choose the test from the **DISABLED TESTS** list, and click on the < button to move the test to the **ENABLED TESTS** list. Finally, click the **Update** button.

**Target of the test :** An UPS

**Agent deploying the test :** An external agent

**Outputs of the test :** One set of results for each sensor on the target UPS being monitored.

## Configurable parameters for the test

Parameter	Description
Test Period	How often should the test be executed.
Host	The IP address of the host for which this test is to be configured.
SNMPPort	The port at which the monitored target exposes its SNMP MIB; The default value is 161.
SNMPVersion	By default, the eG agent supports SNMP version 1. Accordingly, the default selection in the SNMPversion list is <b>v1</b> . However, if a different SNMP framework is in use in your environment, say SNMP <b>v2</b> or <b>v3</b> , then select the corresponding option from this list.
SNMPCommunity	The SNMP community name that the test uses to communicate with the firewall. This parameter is specific to SNMP <b>v1</b> and <b>v2</b> only. Therefore, if the SNMPVersion chosen is <b>v3</b> , then this parameter will not appear.
UserName	This parameter appears only when <b>v3</b> is selected as the SNMPVersion. SNMP version 3 (SNMPv3) is an extensible SNMP Framework which supplements the SNMPv2 Framework, by additionally supporting message security, access control, and remote SNMP configuration capabilities. To extract performance statistics from the MIB using the highly secure SNMP v3 protocol, the eG agent has to be configured with the required access privileges – in other words, the eG agent should connect to the MIB using the credentials of a user with access permissions to be MIB. Therefore, specify the name of such a user against this parameter.
Context	This parameter appears only when v3 is selected as the SNMPVersion. An SNMP context is a collection of management information accessible by an SNMP entity. An item of management information may exist in more than one context and an SNMP entity potentially has access to many contexts. A context is identified by the SNMPEngineID value of the entity hosting the management information (also called a contextEngineID) and a context name that identifies the specific context (also called a contextName). If the Username provided is associated with a context name, then the eG agent will be able to poll the MIB and collect metrics only if it is configured with the context name as well. In such cases therefore, specify the context name of the Username in the Context text box. By default, this parameter is set to <i>none</i> .
AuthPass	Specify the password that corresponds to the above-mentioned UserName. This parameter once again appears only if the SNMPversion selected is <b>v3</b> .
Confirm Password	Confirm the AuthPass by retying it here.
AuthType	This parameter too appears only if <b>v3</b> is selected as the SNMPVersion. From the AuthType list box, choose the authentication algorithm using which SNMP v3 converts the specified username and password into a 32-bit format to ensure security of SNMP

Parameter	Description
	transactions. You can choose between the following options: <ul style="list-style-type: none"> <li>• <b>MD5</b> – Message Digest Algorithm</li> <li>• <b>SHA</b> – Secure Hash Algorithm</li> </ul>
EncryptFlag	This flag appears only when <b>v3</b> is selected as the SNMPVersion. By default, the eG agent does not encrypt SNMP requests. Accordingly, the this flag is set to <b>No</b> by default. To ensure that SNMP requests sent by the eG agent are encrypted, select the <b>Yes</b> option.
EncryptType	If this EncryptFlag is set to <b>Yes</b> , then you will have to mention the encryption type by selecting an option from the EncryptType list. SNMP v3 supports the following encryption types: <ul style="list-style-type: none"> <li>• <b>DES</b> – Data Encryption Standard</li> <li>• <b>AES</b> – Advanced Encryption Standard</li> </ul>
EncryptPassword	Specify the encryption password here.
Confirm Password	Confirm the encryption password by retyping it here.
Timeout	Specify the duration (in seconds) within which the SNMP query executed by this test should time out in this text box. The default is 10 seconds.
Data Over TCP	By default, in an IT environment, all data transmission occurs over UDP. Some environments however, may be specifically configured to offload a fraction of the data traffic – for instance, certain types of data traffic or traffic pertaining to specific components – to other protocols like TCP, so as to prevent UDP overloads. In such environments, you can instruct the eG agent to conduct the SNMP data traffic related to the monitored target over TCP (and not UDP). For this, set this flag to <b>Yes</b> . By default, this flag is set to <b>No</b> .

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Current temperature	Indicates the current temperature of this sensor.	Celsius	The temperature of the sensor should be within admissible range.

### 3.1.4 UPS Humidity Test

This test auto-discovers the sensors of the target UPS and for each sensor, reports the relative humidity.

This test is disabled by default. To enable the test, go to the **ENABLE / DISABLE TESTS** page using the menu sequence : Agents -> Tests -> Enable/Disable, pick the desired **Component type**, set *Performance* as the **Test type**, choose the test from the **DISABLED TESTS** list, and click on the < button to move the test to the **ENABLED TESTS** list. Finally, click the **Update** button.

**Target of the test :** An UPS

**Agent deploying the test :** An external agent

**Outputs of the test :** One set of results for each sensor on the target UPS being monitored.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The IP address of the host for which this test is to be configured.
SNMPPort	The port at which the monitored target exposes its SNMP MIB; The default value is 161.
SNMPVersion	By default, the eG agent supports SNMP version 1. Accordingly, the default selection in the SNMPversion list is <b>v1</b> . However, if a different SNMP framework is in use in your environment, say SNMP <b>v2</b> or <b>v3</b> , then select the corresponding option from this list.
SNMPCommunity	The SNMP community name that the test uses to communicate with the firewall. This parameter is specific to SNMP <b>v1</b> and <b>v2</b> only. Therefore, if the SNMPVersion chosen is <b>v3</b> , then this parameter will not appear.
UserName	This parameter appears only when <b>v3</b> is selected as the SNMPVersion. SNMP version 3 (SNMPv3) is an extensible SNMP Framework which supplements the SNMPv2 Framework, by additionally supporting message security, access control, and remote SNMP configuration capabilities. To extract performance statistics from the MIB using the highly secure SNMP v3 protocol, the eG agent has to be configured with the required access privileges – in other words, the eG agent should connect to the MIB using the credentials of a user with access permissions to be MIB. Therefore, specify the name of such a user against this parameter.
Context	This parameter appears only when v3 is selected as the SNMPVersion. An SNMP

Parameter	Description
	context is a collection of management information accessible by an SNMP entity. An item of management information may exist in more than one context and an SNMP entity potentially has access to many contexts. A context is identified by the SNMPEngineID value of the entity hosting the management information (also called a contextEngineID) and a context name that identifies the specific context (also called a contextName). If the Username provided is associated with a context name, then the eG agent will be able to poll the MIB and collect metrics only if it is configured with the context name as well. In such cases therefore, specify the context name of the Username in the Context text box. By default, this parameter is set to <i>none</i> .
AuthPass	Specify the password that corresponds to the above-mentioned UserName. This parameter once again appears only if the SNMPversion selected is <b>v3</b> .
Confirm Password	Confirm the AuthPass by retyping it here.
AuthType	This parameter too appears only if <b>v3</b> is selected as the SNMPVersion. From the AuthType list box, choose the authentication algorithm using which SNMP v3 converts the specified username and password into a 32-bit format to ensure security of SNMP transactions. You can choose between the following options: <ul style="list-style-type: none"> <li>• <b>MD5</b> – Message Digest Algorithm</li> <li>• <b>SHA</b> – Secure Hash Algorithm</li> </ul>
EncryptFlag	This flag appears only when <b>v3</b> is selected as the SNMPVersion. By default, the eG agent does not encrypt SNMP requests. Accordingly, the this flag is set to <b>No</b> by default. To ensure that SNMP requests sent by the eG agent are encrypted, select the <b>Yes</b> option.
EncryptType	If this EncryptFlag is set to <b>Yes</b> , then you will have to mention the encryption type by selecting an option from the EncryptType list. SNMP v3 supports the following encryption types: <ul style="list-style-type: none"> <li>• <b>DES</b> – Data Encryption Standard</li> <li>• <b>AES</b> – Advanced Encryption Standard</li> </ul>
EncryptPassword	Specify the encryption password here.
Confirm Password	Confirm the encryption password by retyping it here.
Timeout	Specify the duration (in seconds) within which the SNMP query executed by this test should time out in this text box. The default is 10 seconds.
Data Over TCP	By default, in an IT environment, all data transmission occurs over UDP. Some

Parameter	Description
	environments however, may be specifically configured to offload a fraction of the data traffic – for instance, certain types of data traffic or traffic pertaining to specific components – to other protocols like TCP, so as to prevent UDP overloads. In such environments, you can instruct the eG agent to conduct the SNMP data traffic related to the monitored target over TCP (and not UDP). For this, set this flag to <b>Yes</b> . By default, this flag is set to <b>No</b> .

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Humidity value	Indicates the relative humidity of this sensor.	RH	<p>The humidity levels should be within admissible range.</p> <p>High humidity levels can often lead to condensation, which can in turn cause corrosion or—in sufficient amounts—electrical shorts. But too little humidity promotes buildup of electrostatic charge, and discharges of static electricity can damage or destroy sensitive electronics.</p>

## 3.2 The UPS Battery Layer

One of the key components of a UPS is its battery. A defective battery can often cause failure of the UPS, thus disrupting the delivery of the critical business services it supports. Using the tests mapped to the **UPS Battery** layer, users can accurately determine the current health of the UPS battery.



Figure 3.3: The tests mapped to the UPS Battery layer

### 3.2.1 UPS Battery Details Test

This test reports critical statistics indicating the level of performance and overall health of the UPS battery.

**Target of the test :** An UPS

**Agent deploying the test :** An external agent

**Outputs of the test :** One set of results for the UPS monitored.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The IP address of the host for which this test is to be configured.
SNMPPort	The port at which the monitored target exposes its SNMP MIB; The default value is 161.
SNMPVersion	By default, the eG agent supports SNMP version 1. Accordingly, the default selection in the SNMPversion list is <b>v1</b> . However, if a different SNMP framework is in use in your environment, say SNMP <b>v2</b> or <b>v3</b> , then select the corresponding option from this list.
SNMPCommunity	The SNMP community name that the test uses to communicate with the firewall. This parameter is specific to SNMP <b>v1</b> and <b>v2</b> only. Therefore, if the SNMPVersion chosen is <b>v3</b> , then this parameter will not appear.
UserName	This parameter appears only when <b>v3</b> is selected as the SNMPVersion. SNMP version 3 (SNMPv3) is an extensible SNMP Framework which supplements the SNMPv2 Framework, by additionally supporting message security, access control, and remote SNMP configuration capabilities. To extract performance statistics from the MIB using the highly secure SNMP v3 protocol, the eG agent has to be configured with the required access privileges – in other words, the eG agent should connect to the MIB using the credentials of a user with access permissions to be MIB. Therefore, specify the name of such a user against this parameter.
Context	This parameter appears only when v3 is selected as the SNMPVersion. An SNMP context is a collection of management information accessible by an SNMP entity. An item of management information may exist in more than one context and an SNMP entity potentially has access to many contexts. A context is identified by the SNMPEngineID value of the entity hosting the management information (also called a contextEngineID) and a context name that identifies the specific context (also called a contextName). If the Username provided is associated with a context name, then the eG agent will be able to poll the MIB and collect metrics only if it is configured with the context name as well. In such cases therefore, specify the context name of the Username in the Context text box. By default, this parameter is set to <i>none</i> .
AuthPass	Specify the password that corresponds to the above-mentioned UserName. This

Parameter	Description
	parameter once again appears only if the SNMPversion selected is <b>v3</b> .
Confirm Password	Confirm the AuthPass by retyping it here.
AuthType	This parameter too appears only if <b>v3</b> is selected as the SNMPVersion. From the AuthType list box, choose the authentication algorithm using which SNMP v3 converts the specified username and password into a 32-bit format to ensure security of SNMP transactions. You can choose between the following options: <ul style="list-style-type: none"> <li>• <b>MD5</b> – Message Digest Algorithm</li> <li>• <b>SHA</b> – Secure Hash Algorithm</li> </ul>
EncryptFlag	This flag appears only when <b>v3</b> is selected as the SNMPVersion. By default, the eG agent does not encrypt SNMP requests. Accordingly, the this flag is set to <b>No</b> by default. To ensure that SNMP requests sent by the eG agent are encrypted, select the <b>Yes</b> option.
EncryptType	If this EncryptFlag is set to <b>Yes</b> , then you will have to mention the encryption type by selecting an option from the EncryptType list. SNMP v3 supports the following encryption types: <ul style="list-style-type: none"> <li>• <b>DES</b> – Data Encryption Standard</li> <li>• <b>AES</b> – Advanced Encryption Standard</li> </ul>
EncryptPassword	Specify the encryption password here.
Confirm Password	Confirm the encryption password by retyping it here.
Timeout	Specify the duration (in seconds) within which the SNMP query executed by this test should time out in this text box. The default is 10 seconds.
Data Over TCP	By default, in an IT environment, all data transmission occurs over UDP. Some environments however, may be specifically configured to offload a fraction of the data traffic – for instance, certain types of data traffic or traffic pertaining to specific components – to other protocols like TCP, so as to prevent UDP overloads. In such environments, you can instruct the eG agent to conduct the SNMP data traffic related to the monitored target over TCP (and not UDP). For this, set this flag to <b>Yes</b> . By default, this flag is set to <b>No</b> .

**Measurements made by the test**

Measurement	Description	Measurement Unit	Interpretation
Battery usage time	Indicates the battery discharge time.	Secs	This measure indicates the value in secs if the unit is on battery power. The value might return to Zero if the unit is not on battery power.
Running time left	Indicates the running time left in mins, to battery charge depletion under the present load conditions if the utility power is off.	Mins	Ideally, the value of this measure should be high. A low value or a value that is consistently decreasing is indicative of rapid depletion of the battery charge. If this condition is left unattended, it could result in a UPS failure. Under such circumstances, you might want to turn on the utility power and make sure that the UPS is no longer on battery power, so as to safeguard your equipment and data from irreparable damage/loss.
Charge remaining	Indicates the percentage of charge currently remaining in the battery.	Percent	Ideally, this value should be high. If the charge is full, this value would be 100. A value close to 0 or a value that is consistently decreasing is indicative of rapid depletion of the battery charge. If this condition is left unattended, it could result in a UPS failure. Under such circumstances, you might want to turn on the utility power and make sure that the UPS is no longer on battery power, so as to safeguard your equipment and data from irreparable damage/loss.
Battery voltage	Indicates the current battery voltage.	DC_volts	
Battery current	Indicates the amount of current presently conducted by the battery.	DC_Amps	A high value is indicative of excessive usage of the UPS.
Battery temperature	Indicates the current ambient temperature at or	Celsius	Ideally, the value of this measure

Measurement	Description	Measurement Unit	Interpretation
	near the UPS battery.		should be low. A very high value is indicative of a rise in battery temperature that can be caused by excessive usage of the UPS. The temperature of the battery should always be maintained at optimal levels, so as to avoid failure of the UPS and the resultant disruption of power supply. To ensure this, it is recommended that you install a cooling unit (AC unit) in the area where the UPS is installed.

### 3.2.2 UPS Battery Status Test

This test reports the current status of the UPS battery.

**Target of the test :** An UPS

**Agent deploying the test :** An external agent

**Outputs of the test :** One set of results for the UPS monitored.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The IP address of the host for which this test is to be configured.
SNMPPort	The port at which the monitored target exposes its SNMP MIB; The default value is 161.
SNMPVersion	By default, the eG agent supports SNMP version 1. Accordingly, the default selection in the SNMPversion list is <b>v1</b> . However, if a different SNMP framework is in use in your environment, say SNMP <b>v2</b> or <b>v3</b> , then select the corresponding option from this list.
SNMPCommunity	The SNMP community name that the test uses to communicate with the firewall. This parameter is specific to SNMP <b>v1</b> and <b>v2</b> only. Therefore, if the SNMPVersion chosen is <b>v3</b> , then this parameter will not appear.

Parameter	Description
UserName	This parameter appears only when <b>v3</b> is selected as the SNMPVersion. SNMP version 3 (SNMPv3) is an extensible SNMP Framework which supplements the SNMPv2 Framework, by additionally supporting message security, access control, and remote SNMP configuration capabilities. To extract performance statistics from the MIB using the highly secure SNMP v3 protocol, the eG agent has to be configured with the required access privileges – in other words, the eG agent should connect to the MIB using the credentials of a user with access permissions to be MIB. Therefore, specify the name of such a user against this parameter.
Context	This parameter appears only when v3 is selected as the SNMPVersion. An SNMP context is a collection of management information accessible by an SNMP entity. An item of management information may exist in more than one context and an SNMP entity potentially has access to many contexts. A context is identified by the SNMPEngineID value of the entity hosting the management information (also called a contextEngineID) and a context name that identifies the specific context (also called a contextName). If the Username provided is associated with a context name, then the eG agent will be able to poll the MIB and collect metrics only if it is configured with the context name as well. In such cases therefore, specify the context name of the Username in the Context text box. By default, this parameter is set to <i>none</i> .
AuthPass	Specify the password that corresponds to the above-mentioned UserName. This parameter once again appears only if the SNMPversion selected is <b>v3</b> .
Confirm Password	Confirm the AuthPass by retying it here.
AuthType	This parameter too appears only if <b>v3</b> is selected as the SNMPVersion. From the AuthType list box, choose the authentication algorithm using which SNMP v3 converts the specified username and password into a 32-bit format to ensure security of SNMP transactions. You can choose between the following options: <ul style="list-style-type: none"> <li>• <b>MD5</b> – Message Digest Algorithm</li> <li>• <b>SHA</b> – Secure Hash Algorithm</li> </ul>
EncryptFlag	This flag appears only when <b>v3</b> is selected as the SNMPVersion. By default, the eG agent does not encrypt SNMP requests. Accordingly, the this flag is set to <b>No</b> by default. To ensure that SNMP requests sent by the eG agent are encrypted, select the <b>Yes</b> option.
EncryptType	If this EncryptFlag is set to <b>Yes</b> , then you will have to mention the encryption type by selecting an option from the EncryptType list. SNMP v3 supports the following encryption types:

Parameter	Description
	<ul style="list-style-type: none"> <li><b>DES</b> – Data Encryption Standard</li> <li><b>AES</b> – Advanced Encryption Standard</li> </ul>
EncryptPassword	Specify the encryption password here.
Confirm Password	Confirm the encryption password by retying it here.
Timeout	Specify the duration (in seconds) within which the SNMP query executed by this test should time out in this text box. The default is 10 seconds.
Data Over TCP	By default, in an IT environment, all data transmission occurs over UDP. Some environments however, may be specifically configured to offload a fraction of the data traffic – for instance, certain types of data traffic or traffic pertaining to specific components – to other protocols like TCP, so as to prevent UDP overloads. In such environments, you can instruct the eG agent to conduct the SNMP data traffic related to the monitored target over TCP (and not UDP). For this, set this flag to <b>Yes</b> . By default, this flag is set to <b>No</b> .

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation								
Battery status	Indicates the current battery status.		<p>The values that this measure can take and its corresponding numeric values are discussed in the table below:</p> <table border="1"> <thead> <tr> <th>Measure Value</th> <th>Numeric Value</th> </tr> </thead> <tbody> <tr> <td>Unknown</td> <td>1</td> </tr> <tr> <td>Battery Normal</td> <td>100</td> </tr> <tr> <td>Battery Low</td> <td>0</td> </tr> </tbody> </table> <p><b>Note:</b></p> <p>By default, this measure reports the above-mentioned <b>Measure Values</b> to indicate the current status of the battery. However, the graph of this measure will represent the same using the numeric equivalents only.</p>	Measure Value	Numeric Value	Unknown	1	Battery Normal	100	Battery Low	0
Measure Value	Numeric Value										
Unknown	1										
Battery Normal	100										
Battery Low	0										

### 3.3 The UPS Service Layer

To evaluate the performance of the input lines and output lines to the UPS, and to measure the I/O activity handled by these lines, use the tests associated with the **UPS Service** layer.

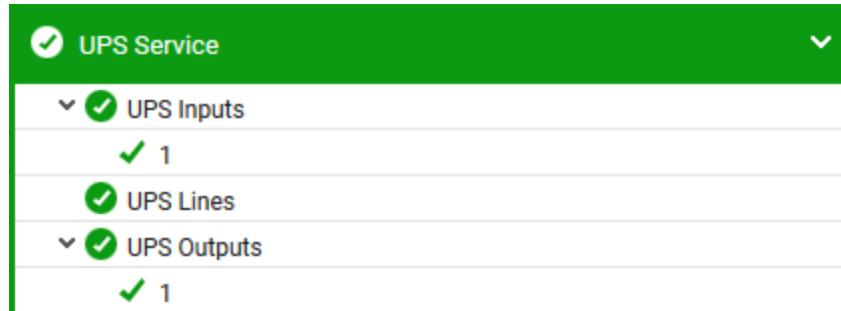


Figure 3.4: The tests mapped to the UPS Service layer

#### 3.3.1 UPS Lines Test

Typically, input lines enable the UPS to draw power from the source. Using this power, the UPS not only recharges its batteries, but also supplies power to all ports attached to it via output lines.

This test monitors the health of the input and output lines, and reports bad input lines (if any).

**Target of the test :** An UPS

**Agent deploying the test :** An external agent

**Outputs of the test :** One set of results for the UPS monitored.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The IP address of the host for which this test is to be configured.
SNMPPort	The port at which the monitored target exposes its SNMP MIB; The default value is 161.
SNMPVersion	By default, the eG agent supports SNMP version 1. Accordingly, the default selection in the SNMPversion list is <b>v1</b> . However, if a different SNMP framework is in use in your environment, say SNMP <b>v2</b> or <b>v3</b> , then select the corresponding option from this list.
SNMPCommunity	The SNMP community name that the test uses to communicate with the firewall. This

Parameter	Description
	parameter is specific to SNMP <b>v1</b> and <b>v2</b> only. Therefore, if the SNMPVersion chosen is <b>v3</b> , then this parameter will not appear.
UserName	This parameter appears only when <b>v3</b> is selected as the SNMPVersion. SNMP version 3 (SNMPv3) is an extensible SNMP Framework which supplements the SNMPv2 Framework, by additionally supporting message security, access control, and remote SNMP configuration capabilities. To extract performance statistics from the MIB using the highly secure SNMP v3 protocol, the eG agent has to be configured with the required access privileges – in other words, the eG agent should connect to the MIB using the credentials of a user with access permissions to be MIB. Therefore, specify the name of such a user against this parameter.
Context	This parameter appears only when v3 is selected as the SNMPVersion. An SNMP context is a collection of management information accessible by an SNMP entity. An item of management information may exist in more than one context and an SNMP entity potentially has access to many contexts. A context is identified by the SNMPEngineID value of the entity hosting the management information (also called a contextEngineID) and a context name that identifies the specific context (also called a contextName). If the Username provided is associated with a context name, then the eG agent will be able to poll the MIB and collect metrics only if it is configured with the context name as well. In such cases therefore, specify the context name of the Username in the Context text box. By default, this parameter is set to <i>none</i> .
AuthPass	Specify the password that corresponds to the above-mentioned UserName. This parameter once again appears only if the SNMPversion selected is <b>v3</b> .
Confirm Password	Confirm the AuthPass by retying it here.
AuthType	This parameter too appears only if <b>v3</b> is selected as the SNMPVersion. From the AuthType list box, choose the authentication algorithm using which SNMP v3 converts the specified username and password into a 32-bit format to ensure security of SNMP transactions. You can choose between the following options: <ul style="list-style-type: none"> <li>• <b>MD5</b> – Message Digest Algorithm</li> <li>• <b>SHA</b> – Secure Hash Algorithm</li> </ul>
EncryptFlag	This flag appears only when <b>v3</b> is selected as the SNMPVersion. By default, the eG agent does not encrypt SNMP requests. Accordingly, the this flag is set to <b>No</b> by default. To ensure that SNMP requests sent by the eG agent are encrypted, select the <b>Yes</b> option.
EncryptType	If this EncryptFlag is set to <b>Yes</b> , then you will have to mention the encryption type by selecting an option from the EncryptType list. SNMP v3 supports the following

Parameter	Description
	encryption types: <ul style="list-style-type: none"><li>• <b>DES</b> – Data Encryption Standard</li><li>• <b>AES</b> – Advanced Encryption Standard</li></ul>
EncryptPassword	Specify the encryption password here.
Confirm Password	Confirm the encryption password by retyping it here.
Timeout	Specify the duration (in seconds) within which the SNMP query executed by this test should time out in this text box. The default is 10 seconds.
Data Over TCP	By default, in an IT environment, all data transmission occurs over UDP. Some environments however, may be specifically configured to offload a fraction of the data traffic – for instance, certain types of data traffic or traffic pertaining to specific components – to other protocols like TCP, so as to prevent UDP overloads. In such environments, you can instruct the eG agent to conduct the SNMP data traffic related to the monitored target over TCP (and not UDP). For this, set this flag to <b>Yes</b> . By default, this flag is set to <b>No</b> .

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Bad input lines to the UPS	Indicates the current number of bad input lines to the UPS.	Number	An input line is deemed bad when the input it transmits enters an out-of-tolerance condition as defined by the manufacturer.  Ideally, the value of this measure should be 0.
Input lines to the UPS	Indicates the number of input lines currently utilized by this UPS.	Number	A high value is indicative of high activity on the UPS.
UPS output frequency	Indicates the current output frequency.	Hertz	
UPS output lines	Indicates the number of output lines currently utilized by this UPS.	Number	A high value is indicative of high activity on the UPS.

### 3.3.2 UPS Inputs Test

This test monitors the inputs to the UPS via input lines, and reveals the level of activity on the UPS. Any drop in the level (i.e., a sudden voltage drop) could indicate an imminent power failure at the source.

**Target of the test :** An UPS

**Agent deploying the test :** An external agent

**Outputs of the test :** One set of results for every input line to the UPS monitored.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The IP address of the host for which this test is to be configured.
SNMPPort	The port at which the monitored target exposes its SNMP MIB; The default value is 161.
SNMPVersion	By default, the eG agent supports SNMP version 1. Accordingly, the default selection in the SNMPversion list is <b>v1</b> . However, if a different SNMP framework is in use in your environment, say SNMP <b>v2</b> or <b>v3</b> , then select the corresponding option from this list.
SNMPCommunity	The SNMP community name that the test uses to communicate with the firewall. This parameter is specific to SNMP <b>v1</b> and <b>v2</b> only. Therefore, if the SNMPVersion chosen is <b>v3</b> , then this parameter will not appear.
UserName	This parameter appears only when <b>v3</b> is selected as the SNMPVersion. SNMP version 3 (SNMPv3) is an extensible SNMP Framework which supplements the SNMPv2 Framework, by additionally supporting message security, access control, and remote SNMP configuration capabilities. To extract performance statistics from the MIB using the highly secure SNMP v3 protocol, the eG agent has to be configured with the required access privileges – in other words, the eG agent should connect to the MIB using the credentials of a user with access permissions to be MIB. Therefore, specify the name of such a user against this parameter.
Context	This parameter appears only when v3 is selected as the SNMPVersion. An SNMP context is a collection of management information accessible by an SNMP entity. An item of management information may exist in more than one context and an SNMP entity potentially has access to many contexts. A context is identified by the SNMPEngineID value of the entity hosting the management information (also called a

Parameter	Description
	contextEngineID) and a context name that identifies the specific context (also called a contextName). If the Username provided is associated with a context name, then the eG agent will be able to poll the MIB and collect metrics only if it is configured with the context name as well. In such cases therefore, specify the context name of the Username in the Context text box. By default, this parameter is set to <i>none</i> .
AuthPass	Specify the password that corresponds to the above-mentioned UserName. This parameter once again appears only if the SNMPversion selected is <b>v3</b> .
Confirm Password	Confirm the AuthPass by retying it here.
AuthType	This parameter too appears only if <b>v3</b> is selected as the SNMPVersion. From the AuthType list box, choose the authentication algorithm using which SNMP v3 converts the specified username and password into a 32-bit format to ensure security of SNMP transactions. You can choose between the following options: <ul style="list-style-type: none"> <li>• <b>MD5</b> – Message Digest Algorithm</li> <li>• <b>SHA</b> – Secure Hash Algorithm</li> </ul>
EncryptFlag	This flag appears only when <b>v3</b> is selected as the SNMPVersion. By default, the eG agent does not encrypt SNMP requests. Accordingly, the this flag is set to <b>No</b> by default. To ensure that SNMP requests sent by the eG agent are encrypted, select the <b>Yes</b> option.
EncryptType	If this EncryptFlag is set to <b>Yes</b> , then you will have to mention the encryption type by selecting an option from the EncryptType list. SNMP v3 supports the following encryption types: <ul style="list-style-type: none"> <li>• <b>DES</b> – Data Encryption Standard</li> <li>• <b>AES</b> – Advanced Encryption Standard</li> </ul>
EncryptPassword	Specify the encryption password here.
Confirm Password	Confirm the encryption password by retying it here.
Timeout	Specify the duration (in seconds) within which the SNMP query executed by this test should time out in this text box. The default is 10 seconds.
Data Over TCP	By default, in an IT environment, all data transmission occurs over UDP. Some environments however, may be specifically configured to offload a fraction of the data traffic – for instance, certain types of data traffic or traffic pertaining to specific components – to other protocols like TCP, so as to prevent UDP overloads. In such environments, you can instruct the eG agent to conduct the SNMP data traffic related

Parameter	Description
	to the monitored target over TCP (and not UDP). For this, set this flag to <b>Yes</b> . By default, this flag is set to <b>No</b> .

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Input frequency	Indicates the current input frequency.	Hertz	
Input voltage	Indicates the current input voltage.	RMS_Volts	A sudden dip in the voltage could indicate a problem condition.
Input current	Indicates the input current presently handled by the input lines.	RMS_Amps	
Input power	Indicates the magnitude of present input true power.	Watts	A sudden/consistent dip in the power supply in the input lines could indicate that the power source may go down any time.

### 3.3.3 UPS Outputs Test

This test monitors the outputs sent by the UPS via its output lines to the loads. Any discrepancy in the level of activity on the output lines could be indicative of a problem with the UPS.

**Target of the test :** An UPS

**Agent deploying the test :** An external agent

**Outputs of the test :** One set of results for every output line from the UPS monitored.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The IP address of the host for which this test is to be configured.
SNMPPort	The port at which the monitored target exposes its SNMP MIB; The default value is 161.

Parameter	Description
SNMPVersion	By default, the eG agent supports SNMP version 1. Accordingly, the default selection in the SNMPversion list is <b>v1</b> . However, if a different SNMP framework is in use in your environment, say SNMP <b>v2</b> or <b>v3</b> , then select the corresponding option from this list.
SNMPCommunity	The SNMP community name that the test uses to communicate with the firewall. This parameter is specific to SNMP <b>v1</b> and <b>v2</b> only. Therefore, if the SNMPVersion chosen is <b>v3</b> , then this parameter will not appear.
UserName	This parameter appears only when <b>v3</b> is selected as the SNMPVersion. SNMP version 3 (SNMPv3) is an extensible SNMP Framework which supplements the SNMPv2 Framework, by additionally supporting message security, access control, and remote SNMP configuration capabilities. To extract performance statistics from the MIB using the highly secure SNMP v3 protocol, the eG agent has to be configured with the required access privileges – in other words, the eG agent should connect to the MIB using the credentials of a user with access permissions to be MIB. Therefore, specify the name of such a user against this parameter.
Context	This parameter appears only when v3 is selected as the SNMPVersion. An SNMP context is a collection of management information accessible by an SNMP entity. An item of management information may exist in more than one context and an SNMP entity potentially has access to many contexts. A context is identified by the SNMPEngineID value of the entity hosting the management information (also called a contextEngineID) and a context name that identifies the specific context (also called a contextName). If the Username provided is associated with a context name, then the eG agent will be able to poll the MIB and collect metrics only if it is configured with the context name as well. In such cases therefore, specify the context name of the Username in the Context text box. By default, this parameter is set to <i>none</i> .
AuthPass	Specify the password that corresponds to the above-mentioned UserName. This parameter once again appears only if the SNMPversion selected is <b>v3</b> .
Confirm Password	Confirm the AuthPass by retyping it here.
AuthType	This parameter too appears only if <b>v3</b> is selected as the SNMPVersion. From the AuthType list box, choose the authentication algorithm using which SNMP v3 converts the specified username and password into a 32-bit format to ensure security of SNMP transactions. You can choose between the following options: <ul style="list-style-type: none"> <li>• <b>MD5</b> – Message Digest Algorithm</li> <li>• <b>SHA</b> – Secure Hash Algorithm</li> </ul>
EncryptFlag	This flag appears only when <b>v3</b> is selected as the SNMPVersion. By default, the eG agent does not encrypt SNMP requests. Accordingly, the this flag is set to <b>No</b> by

Parameter	Description
	default. To ensure that SNMP requests sent by the eG agent are encrypted, select the <b>Yes</b> option.
EncryptType	If this EncryptFlag is set to <b>Yes</b> , then you will have to mention the encryption type by selecting an option from the EncryptType list. SNMP v3 supports the following encryption types: <ul style="list-style-type: none"> <li>• <b>DES</b> – Data Encryption Standard</li> <li>• <b>AES</b> – Advanced Encryption Standard</li> </ul>
EncryptPassword	Specify the encryption password here.
Confirm Password	Confirm the encryption password by retyping it here.
Timeout	Specify the duration (in seconds) within which the SNMP query executed by this test should time out in this text box. The default is 10 seconds.
Data Over TCP	By default, in an IT environment, all data transmission occurs over UDP. Some environments however, may be specifically configured to offload a fraction of the data traffic – for instance, certain types of data traffic or traffic pertaining to specific components – to other protocols like TCP, so as to prevent UDP overloads. In such environments, you can instruct the eG agent to conduct the SNMP data traffic related to the monitored target over TCP (and not UDP). For this, set this flag to <b>Yes</b> . By default, this flag is set to <b>No</b> .

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Output voltage	Indicates the current output voltage.	RMS_Volts	
Output current	Indicates the present output current.	RMS_Amps	
Output power	Indicates the magnitude of present output true power.	Watts	A sudden dip in the power supplied through the output lines could indicate a problem with the UPS that requires investigation.
Output load	Indicates the percentage of the UPS power capacity presently being used on this output line.	Percent	Comparing the value of this measure across output lines will reveal which output line is utilizing the maximum power.

# About eG Innovations

eG Innovations provides intelligent performance management solutions that automate and dramatically accelerate the discovery, diagnosis, and resolution of IT performance issues in on-premises, cloud and hybrid environments. Where traditional monitoring tools often fail to provide insight into the performance drivers of business services and user experience, eG Innovations provides total performance visibility across every layer and every tier of the IT infrastructure that supports the business service chain. From desktops to applications, from servers to network and storage, from virtualization to cloud, eG Innovations helps companies proactively discover, instantly diagnose, and rapidly resolve even the most challenging performance and user experience issues.

eG Innovations is dedicated to helping businesses across the globe transform IT service delivery into a competitive advantage and a center for productivity, growth and profit. Many of the world's largest businesses use eG Enterprise to enhance IT service performance, increase operational efficiency, ensure IT effectiveness and deliver on the ROI promise of transformational IT investments across physical, virtual and cloud environments.

To learn more visit [www.eginnovations.com](http://www.eginnovations.com).

## Contact Us

For support queries, email [support@eginnovations.com](mailto:support@eginnovations.com).

To contact eG Innovations sales team, email [sales@eginnovations.com](mailto:sales@eginnovations.com).

Copyright © 2020 eG Innovations Inc. All rights reserved.

This document may not be reproduced by any means nor modified, decompiled, disassembled, published or distributed, in whole or in part, or translated to any electronic medium or other means without the prior written consent of eG Innovations. eG Innovations makes no warranty of any kind with regard to the software and documentation, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information contained in this document is subject to change without notice.

All right, title, and interest in and to the software and documentation are and shall remain the exclusive property of eG Innovations. All trademarks, marked and not marked, are the property of their respective owners. Specifications subject to change without notice.