



# Monitoring IBM HMC Server

eG Innovations Product Documentation

# Table of Contents

---

CHAPTER 1: INTRODUCTION .....	1
CHAPTER 2: HOW TO MONITOR IBM HMC SERVER USING EG ENTERPRISE? .....	2
2.1 Pre-requisites for monitoring the IBM HMC Server .....	2
2.2 Managing the IBM HMC Server .....	2
CHAPTER 3: MONITORING THE IBM HMC SERVER .....	4
3.1 The Operating System Layer .....	5
3.1.1 HMC Disk Space Test .....	5
3.1.2 HMC Memory Test .....	6
3.1.3 HMC Processor Test .....	7
3.1.4 HMC Uptime Test .....	8
3.2 The Network Layer .....	10
3.3 The HMC Server Layer .....	11
3.3.1 HMC Status Test .....	11
3.4 The HMC Managed Servers Layer .....	12
3.4.1 Managed Server Informations Test .....	12
3.4.2 Managed Server Details Test .....	13
3.5 The HMC Services Layer .....	15
3.5.1 HMC Terminal Logins Test .....	16
3.5.2 RMC Tasks Test .....	17
3.5.3 HMC Web Logins Test .....	18
3.5.4 HMC Tasks Test .....	20
ABOUT EG INNOVATIONS .....	22

## Table of Figures

---

Figure 2.1: Adding an IBM HMC Server .....	3
Figure 3.1: Layer model of the HCM server .....	4
Figure 3.2: The tests mapped to the Operating System layer .....	5
Figure 3.3: The test mapped to the Network layer .....	10
Figure 3.4: The test mapped to the HMC Server layer .....	11
Figure 3.5: The tests mapped to the HMC Managed Servers layer .....	12
Figure 3.6: The tests mapped to the HMC Services layer .....	15

## Chapter 1: Introduction

IBM provides the Hardware Management Console (HMC) to configure and manage the logical partitions (LPARs) on the IBM pSeries servers. Using an HMC, the following tasks can be performed:

- Configure and manage logical partitions and partition profiles
- Non-disruptively move memory, CPU capacity, and I/O interfaces between LPARs within the same server - i.e., perform dlpars functions.
- Activate and manage dormant processor and memory resources within your system, without taking your system or application down - i.e., activate and manage Capacity on Demand resources.

Owing to the crucial role the HMC server plays in the management of logical partitions, issues in the performance of the HMC server can grossly affect the quality of the user experience with the partitions. It is therefore imperative that the HMC server is monitored and potential problems in its performance promptly captured and corrected. This is where eG Enterprise helps administrators.

## Chapter 2: How to Monitor IBM HMC Server Using eG Enterprise?

eG Enterprise is capable of monitoring the IBM HMC Server using an eG external agent that is deployed on any remote host in the environment. Before attempting to monitor the HMC server, a set of pre-requisites should be fulfilled. These requirements are discussed in the following section.

### 2.1 Pre-requisites for monitoring the IBM HMC Server

The following pre-requisites need to be fulfilled before attempting HMC Server monitoring:

- If you are monitoring versions below 9.1 of IBM HMC Servers, SSH should be enabled on the HMC server;
- All tests executed by the eG agent should be configured with the IP of the HMC server and the credentials of a valid user to the server;

Once the pre-requisites are fulfilled, manage the IBM HMC server using the eG administrative interface. The procedure for achieving this is explained the following section.

### 2.2 Managing the IBM HMC Server

The eG Enterprise cannot automatically discover the IBM HMC server. This implies that you need to manually add the component for monitoring. Remember that the eG Enterprise automatically manages the components that are added manually. To add an IBM HMC server, do the following:

1. Log into the eG administrative interface.
2. Follow the Components -> Add/Modify menu sequence in the **Infrastructure** tile of the **Admin** menu.
3. In the **COMPONENT** page that appears next, select *IBM HMC Server* as the **Component type**. Then, click the **Add New Component** button. This will invoke Figure 2.1.

**COMPONENT**

This page enables the administrator to provide the details of a new component

Category	Component type
All	IBM HMC Server

**Component information**

Host IP/Name	192.168.10.1
Nick name	ibmhmc
Port number	443

**Monitoring approach**

Agentless	<input checked="" type="checkbox"/>
OS	Linux
Mode	SSH
Encryption type	None
Remote port	22
User	sam
Password	*****
Remote agent	192.168.9.104
External agents	192.168.9.104

**Add**

Figure 2.1: Adding an IBM HMC Server

4. the **Host IP** and the **Nick name** of the IBM HMC server in Figure 2.1. Since the HMC server is monitored in an *Agentless* manner, select **Linux** as the **OS** and **SSH** as the **Mode**. Also, provide the credentials of a HMC user who is assigned the *hmcviewer* role in the **User** and **Password** text boxes.
5. Then, click on the **Add** button to add the HMC server component for monitoring.
6. Finally, signout of the eG administrative interface.

## Chapter 3: Monitoring the IBM HMC Server

eG Enterprise offers a dedicated *IBM HMC Server* model, which provides a top-down view of the performance of the HMC server. The tests mapped to each layer of this model are capable of alerting you to anomalies ranging from hardware failures to breaks in the availability of the HMC server to unusually high user logins to the server or sudden logouts.

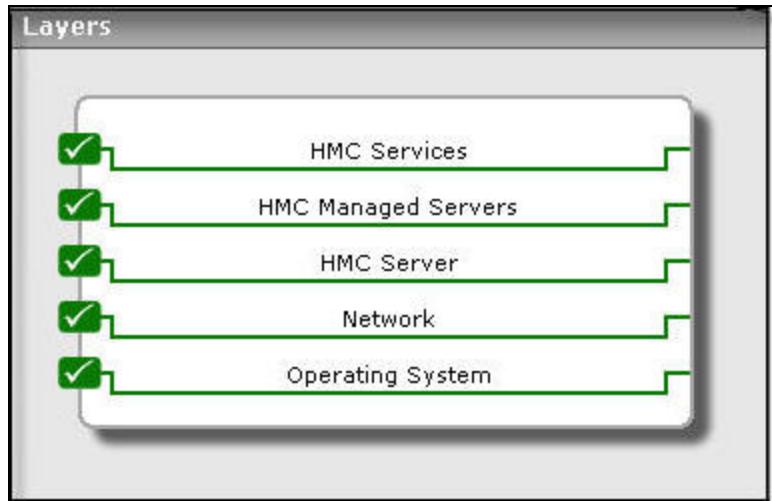


Figure 3.1: Layer model of the HCM server

Using the metrics reported by the layer model, answers to persistent performance queries can be found:

- Is the HMC server available? If so, how quickly can a remote connection to the server be established?
- Do all disk partitions on the server have adequate space?
- Is any processor supported by the server over-utilized?
- Is there a contention for memory resources on the server?
- How many pSeries servers and AIX LPARs have been managed by the server?
- Is any pSeries server not operating currently?
- Is the server currently overloaded with user sessions? What type of sessions are these - sessions initiated by SSH terminals or the HMC console?
- Have too many users suddenly logged out of the server?

## 3.1 The Operating System Layer

Using the tests mapped to this layer you can, do the following

- Isolate disk partitions that are experiencing a space crunch;
- Proactively detect potential CPU and memory resource contentions
- Monitor the uptime of the server

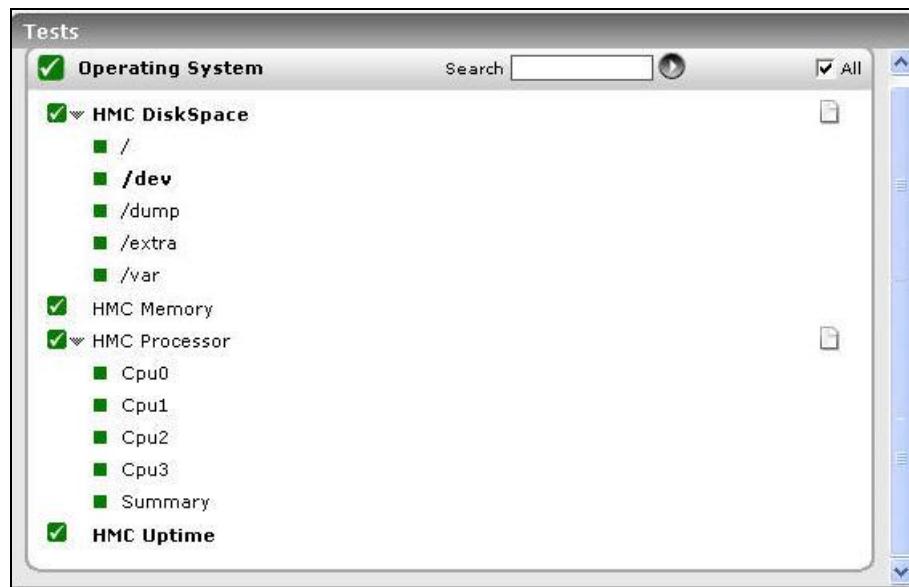


Figure 3.2: The tests mapped to the Operating System layer

### 3.1.1 HMC Disk Space Test

This test monitors the space usage of each disk partitions on the HMC server, and points you to those disk partitions that are critically low on space.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for each disk partition on the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Total capacity	Indicates the total capacity of this disk partition.	MB	
Used space	Indicates the space used on this disk partition.	MB	
Free space	Indicates the amount of unused space on this disk partition.	MB	
Percent usage	Indicates the percentage of space on this disk partition that is in use.	Percent	Ideally, the value of this measure should be low. A high value is indicative of excessive space usage on the disk partition. If the value is dangerously close to 100%, it indicates that the partition will soon run out of space. You may want to clear some space on the disk partition, so that you can continue working with the HMC server

### 3.1.2 HMC Memory Test

By periodically monitoring how the HMC server uses its memory resources, you can capture a potential memory bottleneck much before it actually begins to degrade the performance of the server. This test, at configured intervals, reports on the memory usage levels of the HMC server, and provides you with these early warning signals.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Total memory of HMC	Indicates the total memory capacity of the server.	MB	
Used memory of HMC	Indicates the amount of memory used.	MB	
Free memory of HMC	Indicates the amount of unused memory on HMC.	MB	
Swap memory of HMC	Indicates the amount of swap memory on HMC.	MB	
Memory utilization of HMC	Indicates the percentage of memory used by the HMC server.	Percent	Ideally, the value of this measure should be low. A high value is indicative of excessive memory utilization, which if left unchecked, could cause the performance of the HMC server to suffer.

### 3.1.3 HMC Processor Test

This test keeps track of CPU usage by the HMC server and be proactively alerted to any processor contention with the help of this test.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for each processor supported by the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
CPU utilization	Indicates the percentage of CPU resources utilized by the user processes executing on the HMC server.	Percent	A high value is indicative of excessive CPU usage by user processes.
System CPU utilization	Indicates the percentage of CPU resources utilized for system-level processing.	Percent	A high value is indicative of excessive CPU usage by the core system processes.
Idle CPU	Indicates the percentage of time for which the processor was idle	Percent	A very high value is often indicative of an under-utilized processor.
IO Waits	Indicates the percentage of time the processor was idle waiting for I/O processing to complete.	Percent	Comparing the value of this measure with that of the CPU utilization, System CPU utilization, and Idle CPU measures, will enable you to identify exactly where the HMC server has spent the most of its CPU resources, and why.
Swap memory	Indicates the amount of swap space currently available on the HMC server.	MB	An unusually high value for the swap usage can indicate a memory bottleneck. Check the memory utilization of individual processes to figure out the process(es) that has (have) maximum memory consumption and look to tune their memory usages and allocations accordingly.

#### 3.1.4 HMC Uptime Test

In most production environments, it is essential to monitor the uptime of critical servers in the infrastructure. By tracking the uptime of each of the servers, administrators can determine what percentage of time a server has been up. Comparing this value with service level targets, administrators can determine the most trouble-prone areas of the infrastructure.

In some environments, administrators may schedule periodic reboots of their servers. By knowing that a specific server has been up for an unusually long time, an administrator may come to know that the scheduled reboot task is not working on a server.

This test reports the measures relating to the uptime of critical HMC servers.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.

**Measurements made by the test**

Measurement	Description	Measurement Unit	Interpretation
Has system been rebooted	Indicates whether the server has been rebooted during the last measurement period or not.	Boolean	If this measure shows 1, it means that the server was rebooted during the last measurement period. By checking the time periods when this metric changes from 0 to 1, an administrator can determine the times when this server was rebooted.
Uptime during the last measure period	Indicates the time period that the system has been up since the last time this test ran.	Secs	If the server has not been rebooted during the last measurement period and the agent has been running continuously, this value will be equal to the measurement period. If the server was rebooted during the last measurement period, this value will be less than the measurement period of the test. For example, if the measurement period is 300 secs, and if the server was rebooted 120 secs back, this metric will report a value of

Measurement	Description	Measurement Unit	Interpretation
			120 seconds. The accuracy of this metric is dependent on the measurement period – the smaller the measurement period, greater the accuracy.
Total uptime of the system	Indicates the total time that the server has been up since its last reboot.		This measure displays the number of years, months, days, hours, minutes and seconds since the last reboot. Administrators may wish to be alerted if a server has been running without a reboot for a very long period. Setting a threshold for this metric allows administrators to determine such conditions.

## 3.2 The Network Layer

This layer monitors the availability of the HMC server over the network, and alerts you to bad network connections (if any) to the server.



Figure 3.3: The test mapped to the Network layer

Since this test has been dealt with elaborately in the *Monitoring Unix and Windows Servers* document, let us proceed to the next layer.

### 3.3 The HMC Server Layer

This layer monitors the availability and responsiveness of the HMC server for remote command executions.



Figure 3.4: The test mapped to the HMC Server layer

#### 3.3.1 HMC Status Test

This test reports the availability and the responsiveness of the HMC server to remote command execution.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Availability	Indicates whether the HMC server is available for remote command execution or not.	Number	The value 100 indicates that the HMC server is available and the value 0 indicates that the server is not available.
Response time	Indicates the time taken to connect to the HMC server.	Secs	A high value could indicate a connection bottleneck.

## 3.4 The HMC Managed Servers Layer

To know the number of pSeries servers and AIX LPARs managed by the HMC server, and be updated with the current state of the pSeries servers, use the tests mapped to this layer.



Figure 3.5: The tests mapped to the HMC Managed Servers layer

### 3.4.1 Managed Server Informations Test

This test reports the number of IBM pSeries servers and AIX LPARs that are being managed by the target HMC server.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.

**Measurements made by the test**

Measurement	Description	Measurement Unit	Interpretation
IBM pSeries servers	Indicates number of Series servers being managed by the HMC server.	Number	
Total Aix Lpars	Indicates the number of AIX LPARs being managed by the HMC server.	Number	

### 3.4.2 Managed Server Details Test

This test reports the state of the pSeries servers managed by the HMC server being monitored.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for each IBM pSeries server managed by the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.

**Measurements made by the test**

Measurement	Description	Measurement Unit	Interpretation
State	Indicates the current state		This measure reports the value

Measurement	Description	Measurement Unit	Interpretation										
	of this pSeries server.		<p>Operating, if the pSeries server is in an operational state currently. If not, this measure will report the value Not Operating.</p> <p>The numeric values that correspond to the states discussed above are as follows:</p> <table border="1"> <thead> <tr> <th>State</th><th>Numeric Value</th></tr> </thead> <tbody> <tr> <td>Operating</td><td>1</td></tr> <tr> <td>Power off</td><td>0</td></tr> <tr> <td>Error</td><td>2</td></tr> <tr> <td>Authentication</td><td>3</td></tr> </tbody> </table> <p><b>Note:</b></p> <p>By default, this measure reports the values Operating or Not operating to indicate the status of a managed pSeries servers. The graph of this measure however, represents the status using the numeric equivalents - 0 to 3.</p>	State	Numeric Value	Operating	1	Power off	0	Error	2	Authentication	3
State	Numeric Value												
Operating	1												
Power off	0												
Error	2												
Authentication	3												
Total open managed serviceable events	Indicates the total count of open serviceable events captured by the HMC server.	Number	<p>Problem Analysis on the HMC automatically detects error conditions and reports any problem that requires service to repair it. These problems are reported as serviceable events.</p> <p>Ideally, the value of this measure should be 0. A non-zero value for this measure indicates the existence of one/more error conditions. Under such circumstances, use the detailed diagnosis of the Recent open managed serviceable events measure to know which error conditions occurred recently and are awaiting repair.</p>										

Measurement	Description	Measurement Unit	Interpretation
Recent open managed serviceable events	Indicates the number of serviceable events that were recently opened.	Number	Ideally, the value of this measure should be 0. A non-zero value for this measure indicates the existence of one/more error conditions. Under such circumstances, use the detailed diagnosis of this measure to know which error conditions occurred recently and are awaiting repair.
Recent closed managed serviceable events	Indicates the number of serviceable events that were closed recently.	Number	
Recent console events	Indicates the number of console events that were captured recently by HMC.	Number	Console events are system events occurring on the Hardware Management Console. System events are individual activities that indicate when processes occur, begin and end, succeed or fail. A non-zero value for this measure indicates that system events have occurred.

### 3.5 The HMC Services Layer

Using the tests mapped to this layer, you can determine the level and nature of session activity on HMC server and also the number and type of RMC and HMC tasks executing on the server.



Figure 3.6: The tests mapped to the HMC Services layer

### 3.5.1 HMC Terminal Logins Test

This test monitors the user activity on the HMC server, and reveals the number of new SSH logins and logouts from the server.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.
DD Frequency	Refers to the frequency with which detailed diagnosis measures are to be generated for this test. The default is 1:1. This indicates that, by default, detailed measures will be generated every time this test runs, and also every time the test detects a problem. You can modify this frequency, if you so desire. Also, if you intend to disable the detailed diagnosis capability for this test, you can do so by specifying <i>none</i> against DD frequency.
Detailed Diagnosis	<p>To make diagnosis more efficient and accurate, the eG Enterprise suite embeds an optional detailed diagnostic capability. With this capability, the eG agents can be configured to run detailed, more elaborate tests as and when specific problems are detected. To enable the detailed diagnosis capability of this test for a particular server, choose the <b>On</b> option. To disable the capability, click on the <b>Off</b> option.</p> <p>The option to selectively enable/disable the detailed diagnosis capability will be available only if the following conditions are fulfilled:</p> <ul style="list-style-type: none"> <li>• The eG manager license should allow the detailed diagnosis capability</li> <li>• Both the normal and abnormal frequencies configured for the detailed diagnosis measures should not be 0.</li> </ul>

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Current terminal logins	Indicates the current number of user logins from SSH terminals.	Number	
New terminal logins	Indicates the number of new terminal logins since the last measurement period.	Number	
New terminal logins percentage	Indicates the percentage of new terminal logins.	Percent	A high value could indicate that the user activity on the HMC server has suddenly increased in the current measurement period.
Terminal logouts	Indicates the number of sessions that have logged out.	Number	

### 3.5.2 RMC Tasks Test

This test reports key statistics pertaining to the Remote Monitoring and Control (RMC) tasks executing on the HMC server

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.
Detailed Diagnosis	To make diagnosis more efficient and accurate, the eG Enterprise suite embeds an optional detailed diagnostic capability. With this capability, the eG agents can be configured to run detailed, more elaborate tests as and when specific problems are detected. To enable the detailed diagnosis capability of this test for a particular server,

Parameter	Description
	<p>choose the <b>On</b> option. To disable the capability, click on the <b>Off</b> option.</p> <p>The option to selectively enable/disable the detailed diagnosis capability will be available only if the following conditions are fulfilled:</p> <ul style="list-style-type: none"> <li>• The eG manager license should allow the detailed diagnosis capability</li> <li>• Both the normal and abnormal frequencies configured for the detailed diagnosis measures should not be 0.</li> </ul>

#### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Total tasks	Indicates the total number of RMC tasks available on the HMC server.	Number	Use the detailed diagnosis of this measure to know which tasks are available on the server.
Running tasks	Indicates the number of RMC tasks currently running on the server.	Number	Use the detailed diagnosis of this measure to know which tasks are currently running.
Sleeping tasks	Indicates the number of sleeping RMC tasks.	Number	Use the detailed diagnosis of this measure to know which tasks are sleeping.
Stopped tasks	Indicates the number of RMC tasks that have stopped.	Number	
Zombie tasks	Indicates the number of zombie tasks executing on the server.	Number	

### 3.5.3 HMC Web Logins Test

This test monitors the session activity on the HMC server and reports statistics related to the sessions that were established via the web-based HMC console with the server.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for the HMC server.

## Configurable parameters for the test

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.
DD Frequency	Refers to the frequency with which detailed diagnosis measures are to be generated for this test. The default is 1:1. This indicates that, by default, detailed measures will be generated every time this test runs, and also every time the test detects a problem. You can modify this frequency, if you so desire. Also, if you intend to disable the detailed diagnosis capability for this test, you can do so by specifying <i>none</i> against DD frequency.
Detailed Diagnosis	<p>To make diagnosis more efficient and accurate, the eG Enterprise suite embeds an optional detailed diagnostic capability. With this capability, the eG agents can be configured to run detailed, more elaborate tests as and when specific problems are detected. To enable the detailed diagnosis capability of this test for a particular server, choose the <b>On</b> option. To disable the capability, click on the <b>Off</b> option.</p> <p>The option to selectively enable/disable the detailed diagnosis capability will be available only if the following conditions are fulfilled:</p> <ul style="list-style-type: none"> <li>• The eG manager license should allow the detailed diagnosis capability</li> <li>• Both the normal and abnormal frequencies configured for the detailed diagnosis measures should not be 0.</li> </ul>

## Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Current sessions	Indicates the current number of sessions on the HMC server that were established via the HMC console.	Number	Use the detailed diagnosis of this measure to understand who initiated these sessions and when.
New sessions	Indicates the number of recent web-based logins to the server.	Number	
New sessions percentage	Indicates the percentage of new web-based logins.	Percent	A high value could indicate that the user activity on the HMC server has

Measurement	Description	Measurement Unit	Interpretation
			suddenly increased in the current measurement period.
Logout sessions	Indicates the number of sessions that have logged out.	Number	

### 3.5.4 HMC Tasks Test

This test reports key statistics pertaining to HMC tasks.

**Target of the test :** An IBM HMC server

**Agent deploying the test :** A remote agent

**Outputs of the test :** One set of results for the HMC server.

**Configurable parameters for the test**

Parameter	Description
Test Period	How often should the test be executed.
Host	The host for which the test is to be configured.
Detailed Diagnosis	<p>To make diagnosis more efficient and accurate, the eG Enterprise suite embeds an optional detailed diagnostic capability. With this capability, the eG agents can be configured to run detailed, more elaborate tests as and when specific problems are detected. To enable the detailed diagnosis capability of this test for a particular server, choose the <b>On</b> option. To disable the capability, click on the <b>Off</b> option.</p> <p>The option to selectively enable/disable the detailed diagnosis capability will be available only if the following conditions are fulfilled:</p> <ul style="list-style-type: none"> <li>• The eG manager license should allow the detailed diagnosis capability</li> <li>• Both the normal and abnormal frequencies configured for the detailed diagnosis measures should not be 0.</li> </ul>

### Measurements made by the test

Measurement	Description	Measurement Unit	Interpretation
Total tasks	Indicates the total number of tasks available on the HMC server.	Number	Use the detailed diagnosis of this measure to know which tasks are available on the server.
Running tasks	Indicates the number of tasks currently running on the server.	Number	
Sleeping tasks	Indicates the number of sleeping HMC tasks.	Number	Use the detailed diagnosis of this measure to know which tasks are sleeping.
Stopped tasks	Indicates the number of HMC tasks that have stopped.	Number	
Zombie tasks	Indicates the number of zombie tasks executing on the server.	Number	

# About eG Innovations

eG Innovations provides intelligent performance management solutions that automate and dramatically accelerate the discovery, diagnosis, and resolution of IT performance issues in on-premises, cloud and hybrid environments. Where traditional monitoring tools often fail to provide insight into the performance drivers of business services and user experience, eG Innovations provides total performance visibility across every layer and every tier of the IT infrastructure that supports the business service chain. From desktops to applications, from servers to network and storage, from virtualization to cloud, eG Innovations helps companies proactively discover, instantly diagnose, and rapidly resolve even the most challenging performance and user experience issues.

eG Innovations is dedicated to helping businesses across the globe transform IT service delivery into a competitive advantage and a center for productivity, growth and profit. Many of the world's largest businesses use eG Enterprise to enhance IT service performance, increase operational efficiency, ensure IT effectiveness and deliver on the ROI promise of transformational IT investments across physical, virtual and cloud environments.

To learn more visit [www.eginnovations.com](http://www.eginnovations.com).

## Contact Us

For support queries, email [support@eginnovations.com](mailto:support@eginnovations.com).

To contact eG Innovations sales team, email [sales@eginnovations.com](mailto:sales@eginnovations.com).

Copyright © 2020 eG Innovations Inc. All rights reserved.

This document may not be reproduced by any means nor modified, decompiled, disassembled, published or distributed, in whole or in part, or translated to any electronic medium or other means without the prior written consent of eG Innovations. eG Innovations makes no warranty of any kind with regard to the software and documentation, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information contained in this document is subject to change without notice.

All right, title, and interest in and to the software and documentation are and shall remain the exclusive property of eG Innovations. All trademarks, marked and not marked, are the property of their respective owners. Specifications subject to change without notice.